CONTAX RTS III

ASSEMBLING CHART

KYOCERA CORPORATION
Optical Equipments Division

901201

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

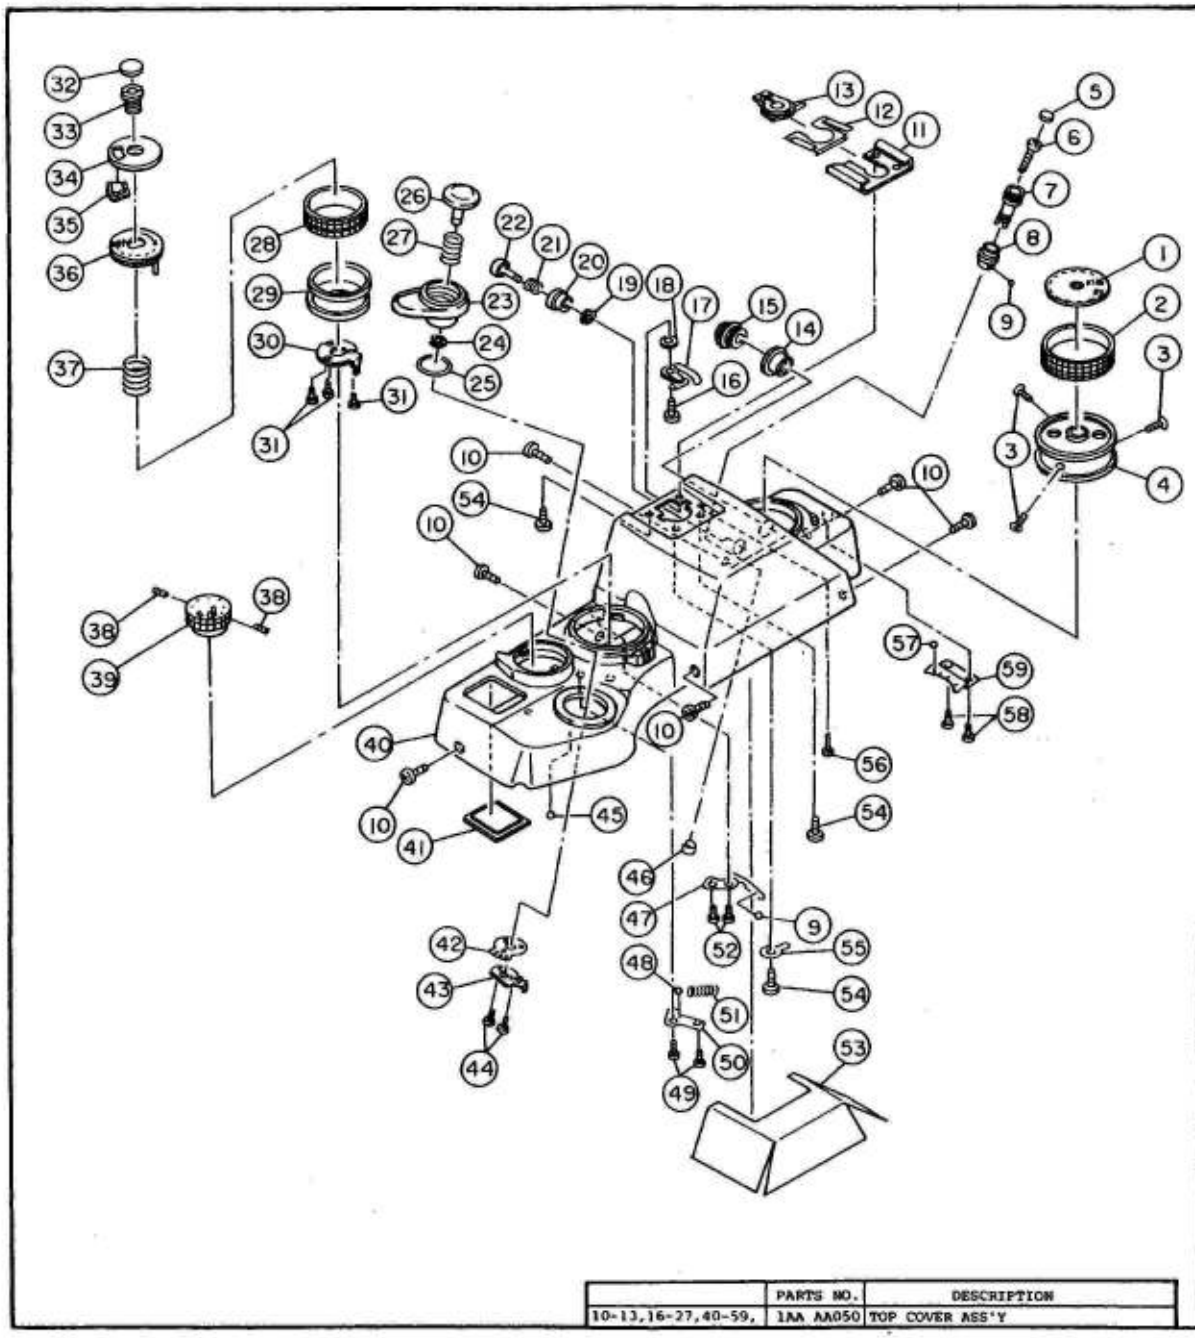

	PARTS NO.	DESCRIPTION
10-13,16-27,40-59,	1AA AA050	TOP COVER ASS'Y

	PARTS NO.	DESCRIPTION	Q'TY
1	1AA 97410	SHUTTER NAME PLATE	1
2	1AA 97510	SHUTTER DIAL COVER	1
3	61815026	SHUTTER DIAL S.S	3
4	1AA 97320	SHUTTER DIAL	1
5	1AA 85630	DIOPTRIC ADJUSTMENT KNOB PLATE	1
6	66001137	DIOPTRIC ADJUSTMENT KNOB S.S	1
7	1AA 85220	DIOPTRIC ADJUSTMENT KNOB	1
8	1AA 29910	DIOPTRIC ADJUSTMENT KNOB HOLDER	1
9	66701220	STEEL BALL(ø1.2)	2
10	61913029	TOP COVER S.S	6
11	1AA 87010	ACCESSORY SHOE	1
12	139 17800	SHOE PLATE SPRING	1
13	1AA AA330	SHOE CONTACT ASS'Y	1
14	139 16402	RELEASE SOCKET DRESS RING	1
15	139 16500	RELEASE SOCKET CAP(S)	1
16	63913022	SHOE CONTACT PLATE(1) S.S	1
17	139 17400	SHOE CONTACT PLATE(1)	1
18	60132112	WASHER	1
19	66101225	E RING	1
20	1AA 94900	S. LOCK BUTTON HOLDER	1
21	139 19200	S. LOCK BUTTON SPRING	1
22	1AA 97020	S. LOCK BUTTON	1
23	1AA 24010	MAIN SWITCH LEVER	1
24	66101225	E RING	1
25	1AA 24700	MAIN SWITCH LEVER O RING	1
26	1AA 24300	MAIN RELEASE BUTTON	1
27	1AA 24410	MAIN SWITCH BUTTON SPRING	1
28	1AA 20200	ISO DIAL RUBBER	1
29	1AA 20110	ISO DIAL	1
30	1AA AC190	ISO LEVER ASS'Y	1
31	61913026	ISO LEVEP S.S	3
32	1AA 21010	EXP. COMPENSATION DRESS PLATE	1
33	1AA 20920	EXP. COMPENSATION NAME PLATE S.S	1
34	1AA 20320	EXP. COMPENSATION NAME PLATE	1
35	1AA 20410	ISO WINDOW	1
36	1AA AA030	ISO NAME PLATE ASS'Y	1
37	1AA 20810	ISO NAME PLATE BASE SPRING	1
38	66001136	DRIVE MODE DIAL S.S	2
39	1AA 27320	DRIVE MODE DIAL	1
40	*	TOP COVER	1
41	1AA 25720	C-LCD WINDOW	1
42	1AA 24620	MAIN SWITCH CLICK PLATE	1
43	1AA AC170	MAIN SWITCH BRUSH LEVER ASS'Y	1
44	61902526	MAIN SWITCH CLICK PLATE S.S	2
45	66701620	STEEL BALL(ø1.58)	1
46	1AA 85400	DIOPTRIC ADJUSTMENT KNOB SPRING	1
47	1AA 21620	ABC CLICK PLATE	1
48	66702420	STEEL BALL(ø2.4)	1
49	61912526	FLASH METER CLICK PLATE S.S	2
50	1AA 26110	FLASH METER CLICK PLATE	1
51	1AA 26030	FLASH METER CLICK SPRING	1
52	64212526	ABC CLICK PLATE S.S	2
53	1AA 21100	TOP COVER INSULATION SHEET	1
54	63912022	ACCESSOPY SHOE S.S	3
55	1AA 29800	LUG PLATE	1
56	1AA 87200	SHOE CONTACT PLATE PIN	1
57	66701520	STEEL BALL(ø1.5)	1
58	61912526	MODE CLICK PLATE S.S	2
59	1AA 96810	MODE CLICK PLATE	1

PARTS MARKED * IS NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

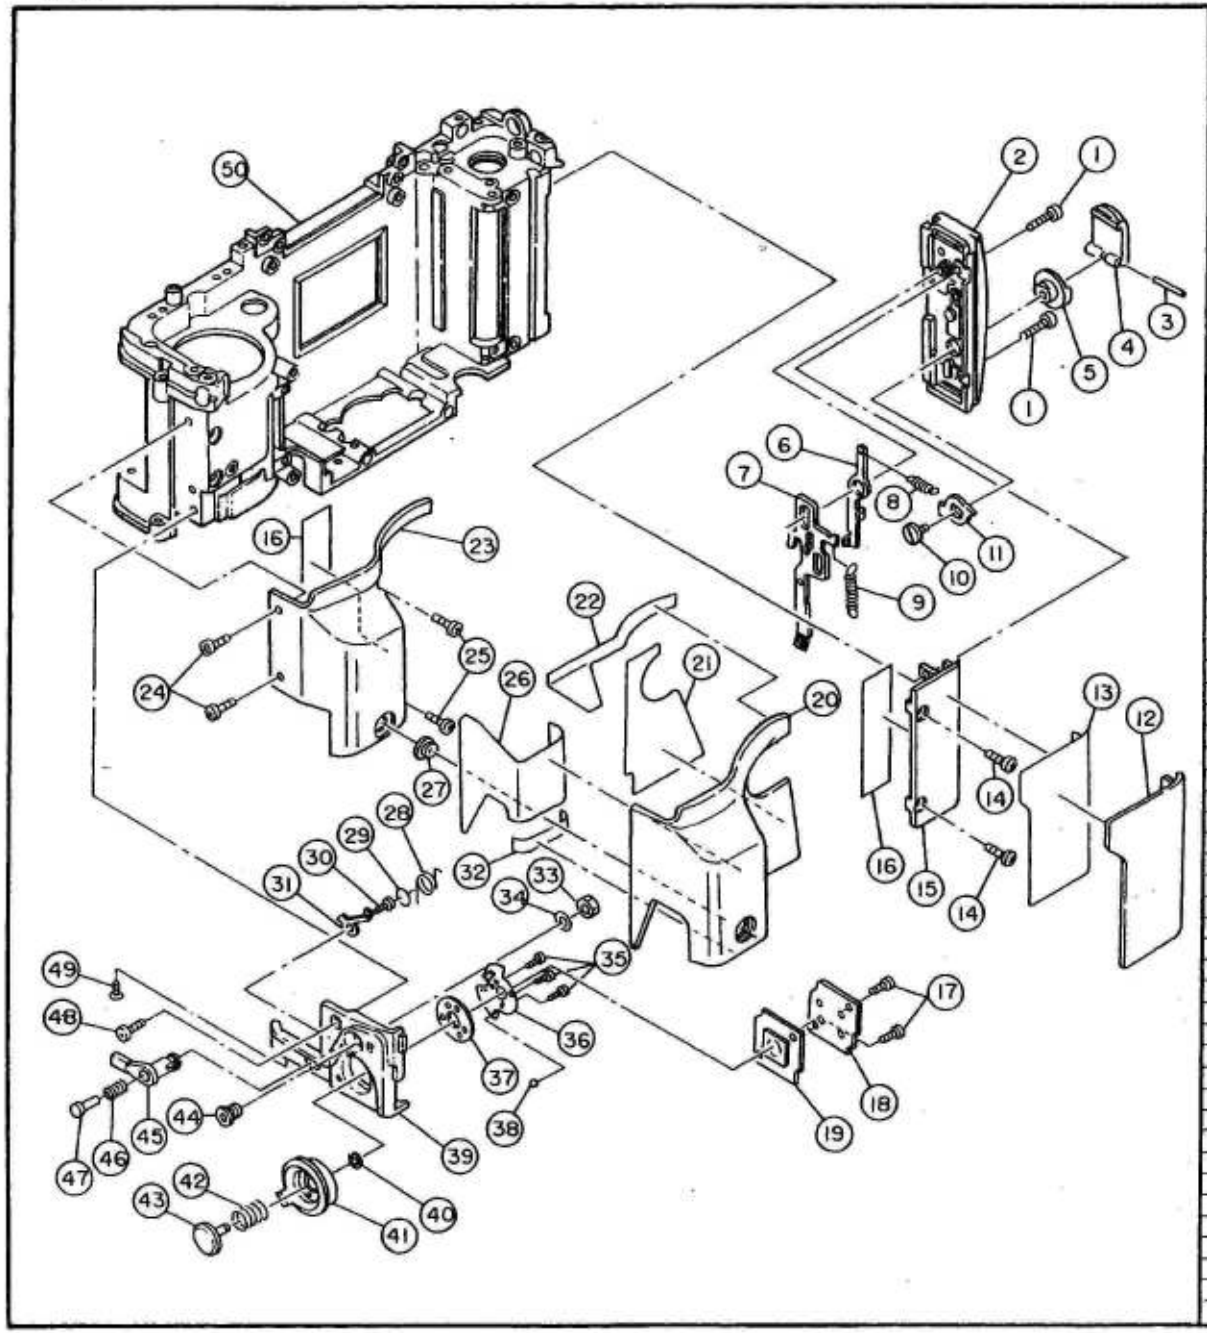

	PARTS NO.	DESCRIPTION	Q'TY
1	63917029	BACK COVER LOCK COVER S.S	2
2	1AA 17000	BACK COVER LOCK COVER	1
3	1AA 99700	SPING PIN	1
4	1AA 17120	BACK COVER LOCK KNOB	1
5	1AA 17220	BACK COVER LOCK KNOB BASE	1
6	1AA 17800	LOCK PLATE RETAINING LEVER	1
7	1AA AA380	BACK COVER LOCK PLATE ASS'Y	1
8	1AA 17910	LOCK PLATE RETAINING LEVER SPRING	1
9	1AA 17710	BACK COVER LOCK PLATE SPRING	1
10	1AA 17510	BACK COVER RELEASE LEVER SCREW	1
11	1AA 17310	BACK COVER RELEASE LEVER	1
12	1AA 13900	FRONT PLATE RUBBER (RIGHT)	1
13	1AA 68000	FRONT PLATE RUBBER (RIGHT) TAPE	1
14	61927026	FRONT PLATE (RIGHT) S.S	2
15	1AA 13800	FRONT PLATE (RIGHT)	1
16	1AA 69000	FRONT PLATE GUARD SHEET	2
17	69113076	VERTICAL RELEASE SW BASE PLATE S.S	2
18	1AA 39610	VERTICAL RELEASE SW BASE PLATE	1
19	1AA 56610	RELEASE P.C BOARD (2) ASS'Y	1
20	1AA 14110	FRONT PLATE RUBBER (LEFT)	1
21	1AA 68100	FRONT PLATE RUBBER (LEFT) TAPE-S	1
22	1AA 67900	FRONT PLATE RUBBER (LEFT) TAPE-D	1
23	1AA 14010	FRONT PLATE (LEFT)	1
24	61924026	FRONT PLATE (LEFT) S.S	2
25	61927026	FRONT PLATE (LEFT) S.S	2
26	1AA 68210	FRONT PLATE RUBBER (LEFT) TAPE-L	1
27	1AA 14210	SELF-TIMER WINDOW	1
28	1AA 29330	REWIND KNOB RETURN SPRING	1
29	1AA 29410	REWIND KNOB SPRING	1
30	61902526	REWIND KNOB OPERATION PLATE S.S	1
31	1AA 29210	REWIND KNOB OPERATION PLATE	1
32	1AA 68300	FRONT PLATE RUBBER (LEFT) TAPE-U	1
33	137 40700	FIRST CURTAIN BRAKE NUT	1
34	60223112	WASHER	1
35	69113076	VERTICAL RELEASE CLICK S.S	3
36	1AA 39430	VERTICAL RELEASE CLICK	1
37	1AA 39310	VERTICAL RELEASE HOLDER PLATE	1
38	66701620	STEEL BALL (ø1.6)	1
39	1AA 39530	VERTICAL RELEASE BASE	1
40	66101525	E RING	1
41	1AA 39230	VERTICAL RELEASE LOCK KNOB	1
42	1AA 24410	MAIN SWITCH BUTTON SPRING	1
43	1AA 39000	VERTICAL RELEASE BUTTON	1
44	1AA 14500	BULB SOCKET	1
45	1AA 29020	REWIND KNOB	1
46	1AA 29520	REWIND KNOB LOCK SPRING	1
47	1AA 29100	REWIND KNOB LOCK BUTTON	1
48	63924026	VERTICAL RELEASE BASE S.S	1
49	61813026	VERTICAL RELEASE BASE S.S	1
50	*	BODY	1
28-31,33-47,	1AA AA180	VERTICAL RELEASE BASE ASS'Y	1

PARTS MARKED * IS NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

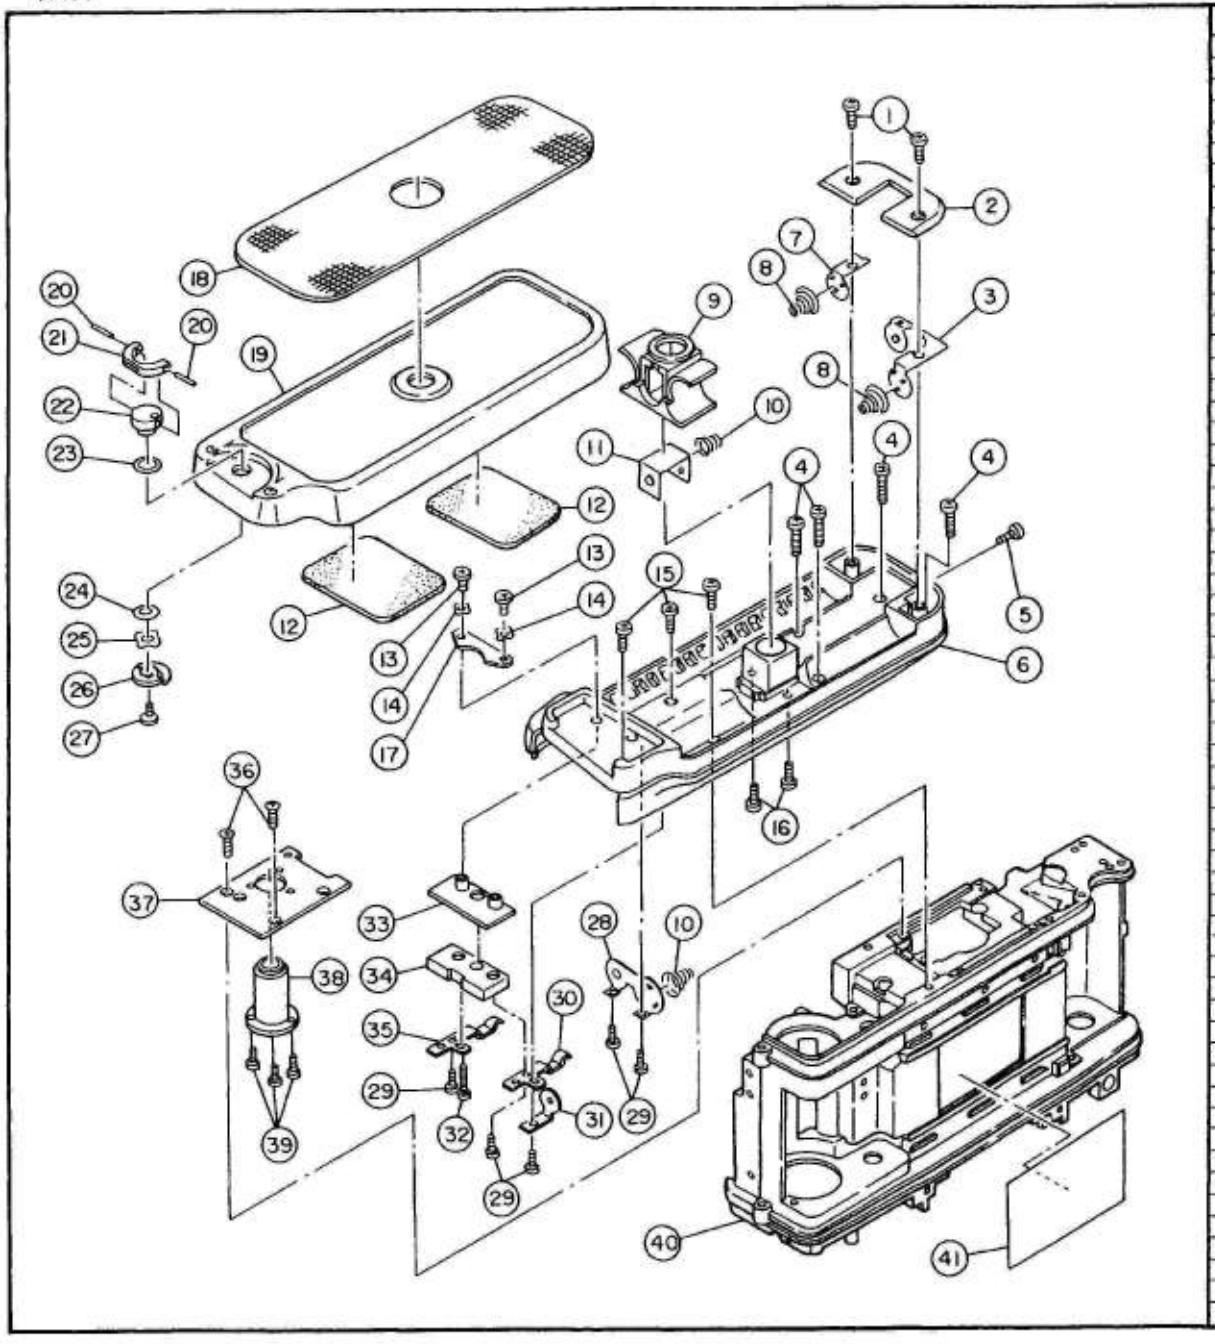

	PARTS NO.	DESCRIPTION	Q'TY
1	69214579	CELL CASE COVER (L) S.S	2
2	1AA 12310	CELL CASE COVER (L)	1
3	1AA 12510	CELL CASE CONTACT (2)	1
4	61927026	CELL CASE S.S	4
5	1AA 12110	BOTTOM COVER GUIDE	1
6	1AA 12020	CELL CASE	1
7	1AA 12800	CELL CONTACT (5)	1
8	1AA 69100	CELL SPRING (L)	2
9	1AA 12210	CELL HOLDER	1
10	1AA 13020	CELL SPRING	2
11	1AA 12600	CELL CONTACT (3)	1
12	1AA 11610	BOTTOM COVER FILM	2
13	137 13500	LOCK PLATE S.S	2
14	131 71110	TV. SW SPRING WASHER	2
15	61925026	CELL CASE S.S	3
16	69214576	CELL HOLDER S.S	2
17	1AA 13400	BOTTOM COVER LOCK PLATE	1
18	1AA 11520	BOTTOM COVER SHEET	1
19	*	BOTTOM COVER	1
20	66660130	SPRING PIN	2
21	141 19900	SET SCREW KNOB	1
22	1AA 11410	LOCK SHAFT	1
23	60126110	WASHER	1
24	1AA 11800	FRICTION SPRING WASHER	1
25	1AA 11700	FRICTION SPRING	1
26	137 24800	LOCK CAM	1
27	66001031	LOCK CAM S.S	1
28	1AA 12720	CELL CONTACT (4)	1
29	69213076	CELL CONTACT S.S	5
30	1AA 12920	LITHIUM BATTERY CONTACT (+)	1
31	1AA 12400	CELL CONTACT (3)	1
32	69214576	LITHIUM BATTERY CONTACT (-) S.S	1
33	1AA AC130	LOCK POST ASS'Y	1
34	1AA 13300	LOCK POST COVER	1
35	1AA 12920	LITHIUM BATTERY CONTACT (-)	1
36	61825026	TRIPOD SCREW BASE S.S	2
37	1AA 10410	TRIPOD SCREW BASE	1
38	1AA 10300	TRIPOD SCREW	1
39	61912526	TRIPOD SCREW S.S	3
40	*	BODY	1
41	1AA 99600	PRESSURE PLATE SHEET	1
12,18-27,			
	1AA AA010	BOTTOM COVER ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

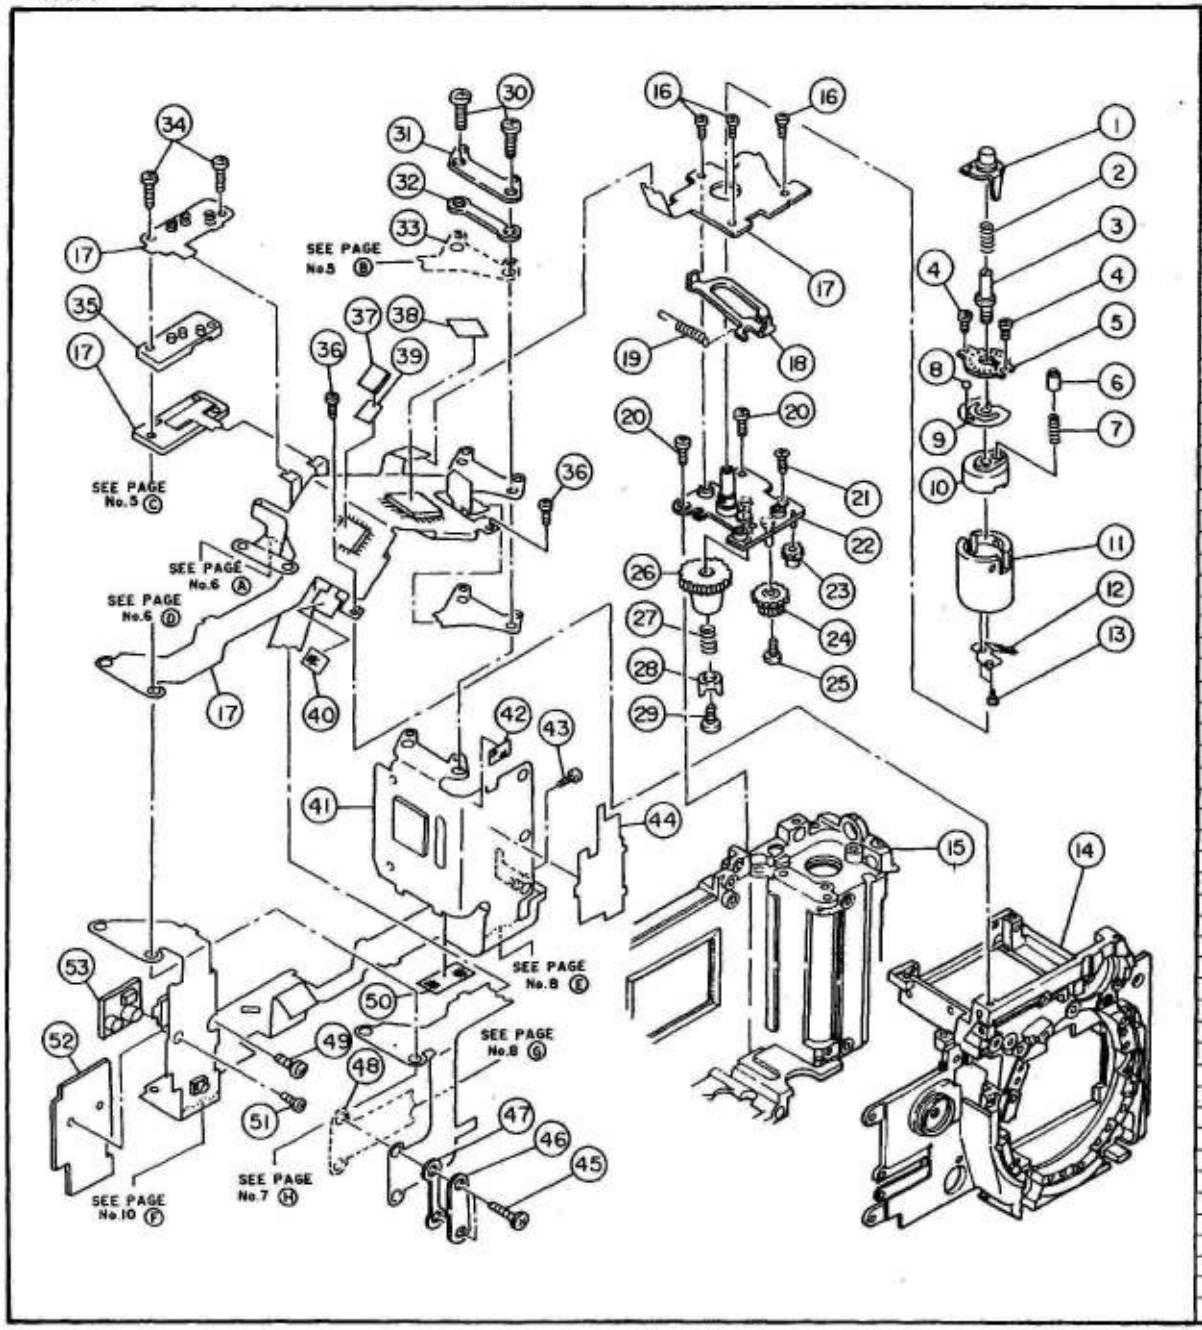

	PARTS NO.	DESCRIPTION	Q'TY
1	1AA AA040	S. LOCK BUTTON ASS'Y	1
2	1AA 97200	SHUTTER LOCK SPRING	1
3	1AA 96010	S. DIAL CLICK S.S	1
4	61902526	S. CLICK PLATE S.S	2
5	1AA 96200	S. CLICK PLATE	1
6	1AA 96110	S. CLICK PIN	1
7	1AA 95910	S. CLICK SPRING	1
8	66701520	STEEL BALL (ø1.5)	1
9	1AA 96300	S. CLICK SPRING PLATE	1
10	1AA 95820	S. DIAL CLICK	1
11	1AA 95610	S. DIAL BASE	1
12	1AA 95700	S. DIAL CONTACT	1
13	61901426	S. DIAL CONTACT S.S	2
14	*	MOUNT BASE	1
15	*	BODY	1
16	63902522	MAIN FPC ASS'Y S.S	3
17	*	MAIN FPC	1
18	1AA 95310	MODE LOCK LEVER	1
19	1AA 95410	MODE LOCK SPRING	1
20	61913026	S. DIAL BASE PLATE S.S	2
21	61813026	S. DIAL BASE PLATE S.S	1
22	1AA AC100	S. DIAL BASE PLATE SUBASSEMBLY	1
23	1AA 43200	REWIND GEAR (4)	1
24	1AA 43620	REWIND GEAR (5)	1
25	66001068	REWIND GEAR (5) S.S	1
26	1AA AC110	REWIND FORK CASE ASS'Y	1
27	16868710	RM CLAW SPRING	1
28	1AA 44010	REWIND FORK	1
29	66001042	REWIND FORK S.S	1
30	66001032	FPC CONNECTOR S.S	2
31	1AA 59700	FPC GUIDE	1
32	1AA 58400	FPC CONNECTOR RUBBER (2)	1
33	---	APERTURE LCD PANEL(See Page No.5)	
34	61918026	MAIN FPC ASS'Y S.S	2
35	1AA B6800	ACCESSORY SHOE BASE	1
36	61913522	MAIN FPC ASS'Y S.S	2
37	1AA AE700	RESISTOR P.C BOARD ASS'Y	1
38	*	DOUBLE STICK TAPE	1
39	*	DOUBLE STICK TAPE	1
40	*	ACETATE CLOTH TAPE	1
41	*	SUB FPC	1
42	*	ACETATE CLOTH TAPE	1
43	61912026	SUB FPC ASS'Y S.S	1
44	*	R. DRIVE FPC	1
45	66001032	FPC CONNECTOR S.S	2
46	1AA 58100	FPC CONNECTOR PLATE (1)	1
47	1AA 58300	FPC CONNECTOR RUBBER (1)	1
48	---	SHUTTER FPC(See Page No.8)	
49	*	ACETATE CLOTH TAPE	1
50	69213076	DC-DC CONVERTER S.S	1
51	61912526	DC-DC CONVERTER S.S	1
52	1AA 52010	DC-DC CONVERTER	1
53	1AA AE800	FILTER P.C BOARD ASS'Y	1
17,37,39,			
	1AA AE000	MAIN FPC ASS'Y	1
41,42,44,			
	1AA AE400	SUB FPC ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

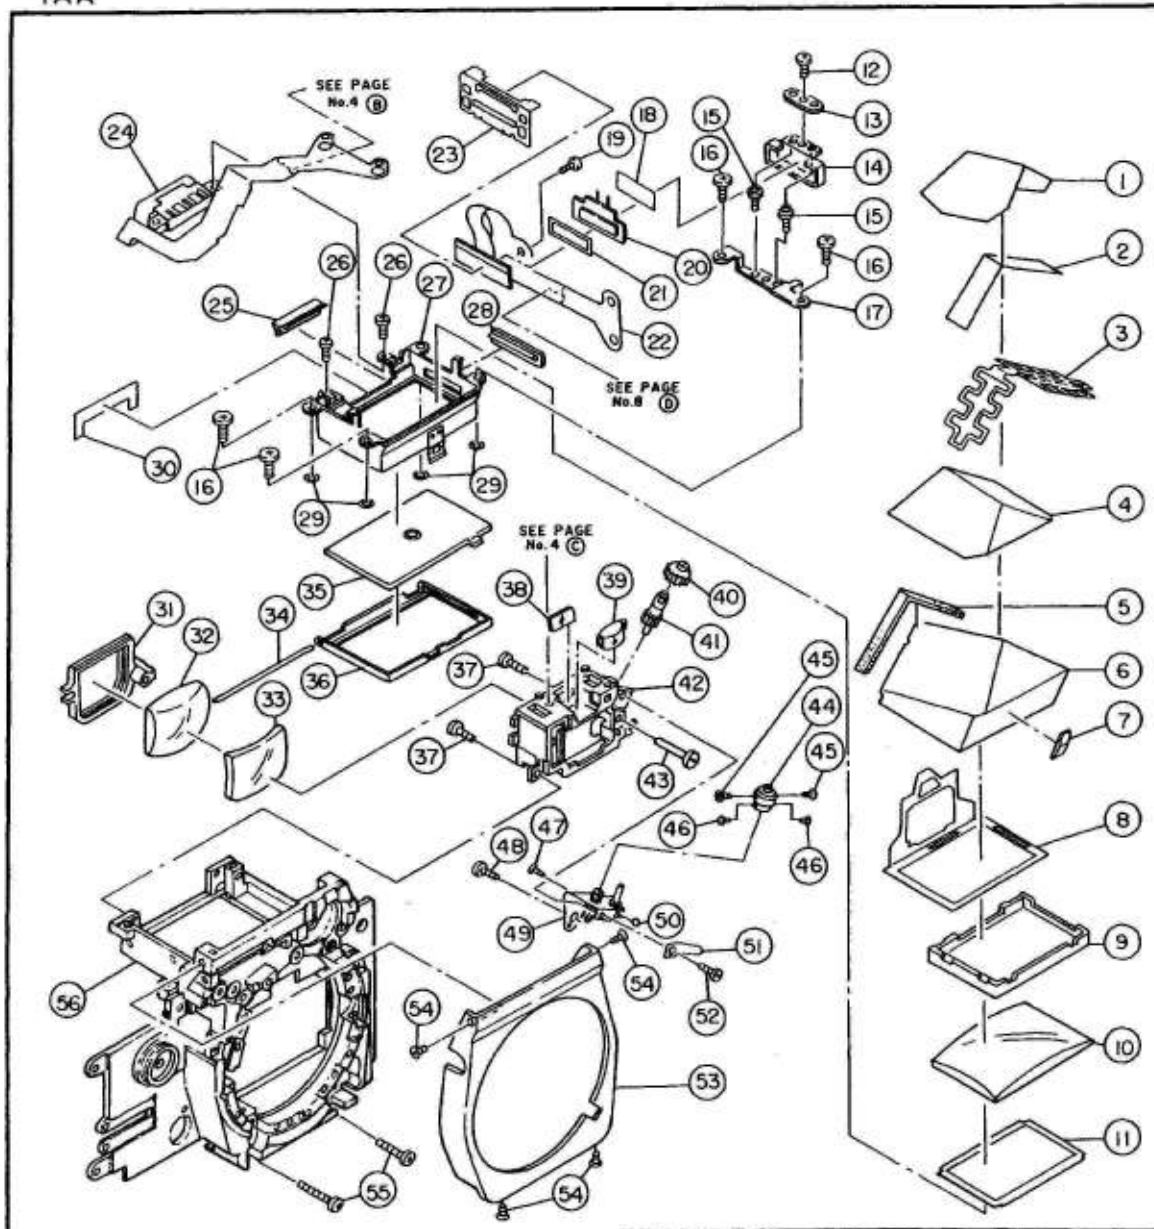

	PARTS NO.	DESCRIPTION	Q'TY
1	174 842	PENTA COVER	1
2	*	DOUBLE STICK TAPE	1
3	1AA 81000	PENTA PRISM RETAINING SPRING	1
4	1AA 80900	PENTA PRISM COVER	1
5	1AA 82110	PENTA PRISM DUST-PROOF MOQUETTE	1
6	1AA 80800	PENTA PRISM	1
7	1AA 82200	PENTA PRISM RETAINING PLATE	1
8	1AA 80700	VIEWFINDER FRAME (B)	1
9	1AA 80600	PENTA PRISM SPACER	1
10	1AA 80500	CONDENSER LENS	1
11	1AA 80400	VIEWFINDER FRAME (A)	1
12	63915026	S-LED ADJUSTMENT PLATE (2) S.S	1
13	139 87700	S-LED ADJUSTMENT PLATE (2)	1
14	1AA 81700	VIEWFINDER INDICATOR HOLDER (B)	1
15	1AA 82000	VIEWFINDER INDICATOR ADJUSTMENT S.S	2
16	66001025	PENTA PRISM HOLDER S.S	4
17	1AA 81900	VIEWFINDER INDICATOR BASE	1
18	1AA 81500	EL ADHESIVE TAPE	1
19	61912026	S-LCD PANEL FPC S.S	1
20	1AA 50800	S-EL	1
21	1AA 81600	LCD ADHESIVE TAPE	1
22	1AA 50700	S-LCD PANEL	1
23	1AA 81800	VIEWFINDER INDICATOR RETAINER (B)	1
24	1AA AB230	VIEWFINDER INDICATOR (A) ASS'Y	1
25	1AA 81120	VIEWFINDER INDICATOR PRISM (A)	1
26	69112066	VIEWFINDER INDICATOR (A) ASS'Y S.S	2
27	1AA AB740	PENTA PRISM HOLDER ASS'Y	1
28	1AA 81200	VIEWFINDER INDICATOR PRISM (B)	1
29	128 66700	FOCUS ADJUSTMENT WASHER(t:0.02)	
	128 66600	FOCUS ADJUSTMENT WASHER(t:0.05)	
	60311812	FOCUS ADJUSTMENT WASHER(t:0.1)	
	60321812	FOCUS ADJUSTMENT WASHER(t:0.2)	
	60331812	FOCUS ADJUSTMENT WASHER(t:0.3)	
	60341812	FOCUS ADJUSTMENT WASHER(t:0.4)	
	60351812	FOCUS ADJUSTMENT WASHER(t:0.5)	
	60361812	FOCUS ADJUSTMENT WASHER(t:0.6)	
30	1AA 69900	DUST-PROOF TAPE	1
31	1AA 86320	EYE-PIECE FRAME	1
32	1AA 86400	EYE-PIECE LENS (B)	1
33	1AA 85700	EYE-PIECE LENS (A)	1
34	1AA 82610	FOCUSING SCREEN HOLDER SHAFT	1
35	1AA 82500	FOCUSING SCREEN	1
36	1AA AB730	FOCUSING SCREEN HOLDER ASS'Y	1
37	61813026	DIOPTRIC ADJUSTMENT ASS'Y S.S	2
38	1AA 86000	CENTER-WEIGHTED METERING MIRROR	1
39	1AA 85900	CENTER-WEIGHTED METERING LENS	1
40	1AA 84830	DIOPTRIC ADJUSTMENT GEAR (3)	1
41	1AA 84710	DIOPTRIC ADJUSTMENT GEAR (2)	1
42	1AA 84120	DIOPTRIC ADJUSTMENT BASE	1
43	1AA 84900	DIOPTRIC ADJUSTMENT FEED SHAFT	1
44	1AA 84320	DIOPTRIC ADJUSTMENT CLUTCH CAP	1
45	61901226	DIOPTRIC ADJUSTMENT CLUTCH CAP S.S	2
46	1AA 85010	DIOPTRIC ADJUSTMENT CLUTCH PIN	2
47	61802026	DIOPTRIC ADJUSTMENT GEAR HOLDER S.S	1
48	66001050	DIOPTRIC ADJUSTMENT FEED SHAFT S.S	1
49	1AA AB220	DIOPTRIC ADJUSTMENT GEAR HOLDER ASS'Y	1
50	66701220	STEEL BALL (ø1.2)	1
51	1AA 85510	DIOPTRIC ADJUSTMENT CLICK SPRING	1
52	1AA 85130	DIOPTRIC ADJUSTMENT HOLDER S.S	1
53	1AA 70020	FRONT COVER	1

PARTS MARKED * ARE NOT AVAILABLE

	PARTS NO.	DESCRIPTION
14,18,20-23	1AA AB010	VIEWFINDER INDICATOR (B) ASS'Y
31-33,38-52,	1AA AB020	DIOPTRIC ADJUSTMENT ASS'Y

	PARTS NO.	DESCRIPTION	Q'TY
54	61813029	FRONT COVER S.S	4
55	66001061	MIRROR BOX ASS'Y S.S	2
56	*	MOUNT BASE	1

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

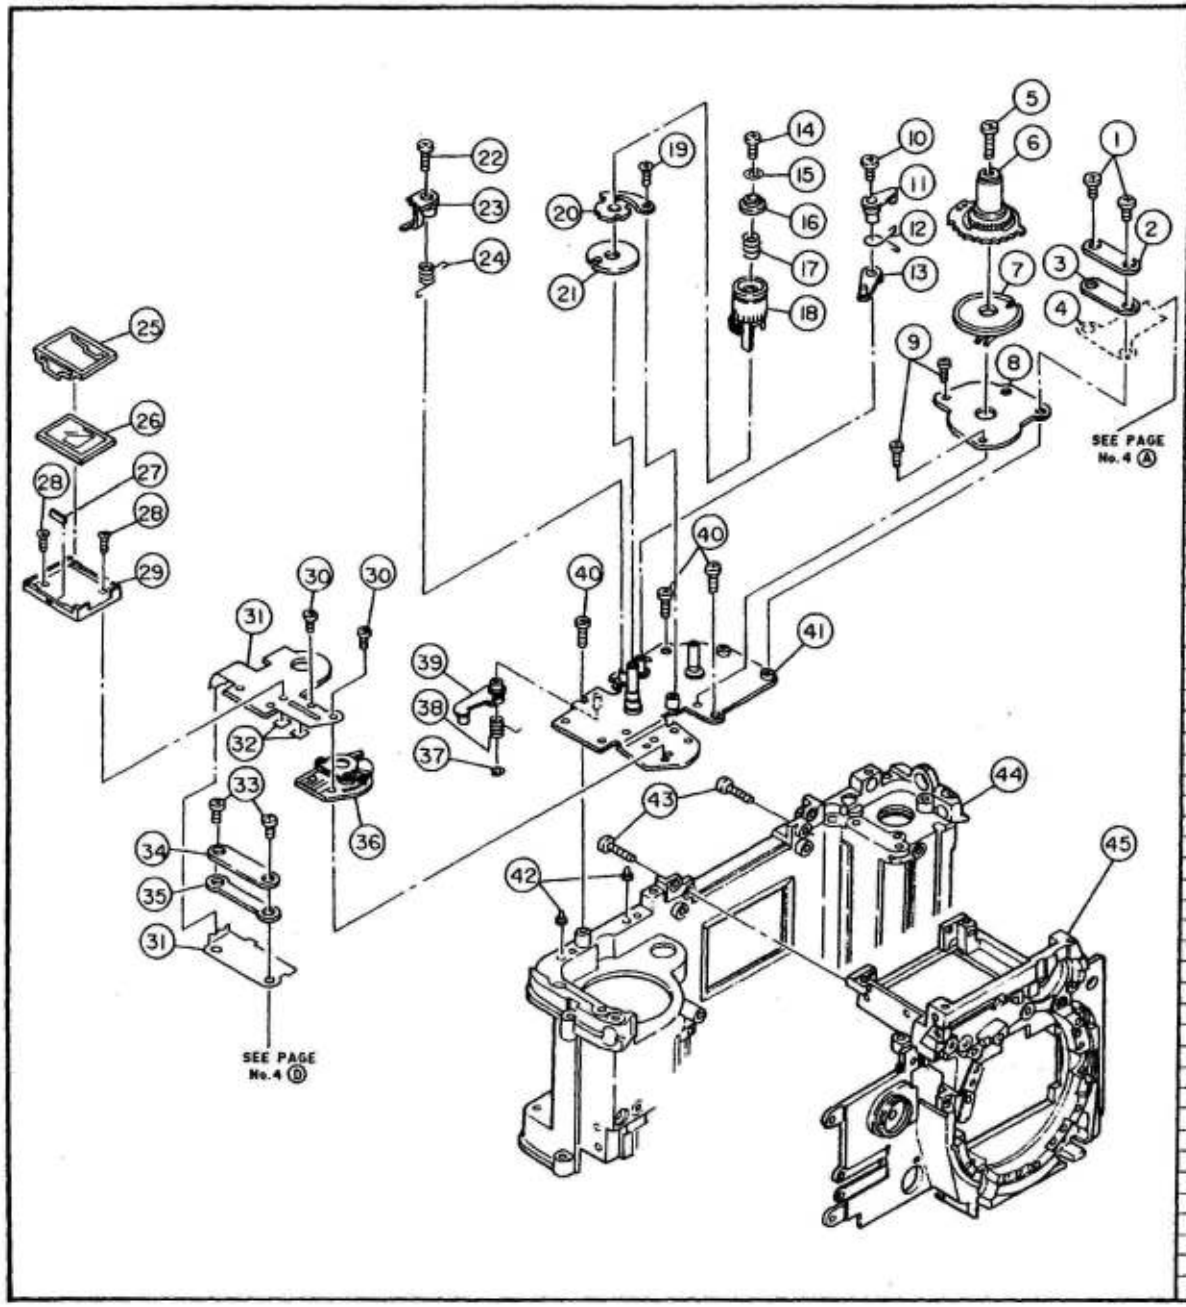

	PARTS NO.	DESCRIPTION	Q'TY
1	66001076	ISO CONNECTOR S.S	2
2	1AA 58000	ISO CONNECTOR PLATE	1
3	1AA 57900	ISO CONNECTOR RUBBER	1
4	---	MAIN FPC(See Page No.4)	
5	63924026	ISO LOCK PLATE ASS'Y S.S	1
6	1AA AA420	ISO LOCK PLATE ASS'Y	1
7	1AA AA410	ISO BRUSH PLATE ASS'Y	1
8	1AA 56310	ISO P.C BOARD	1
9	61912026	ISO P.C BOARD S.S	2
10	66001046	EXP. COMPENSATION CLICK LEVER S.S	1
11	1AA AA400	EXP. COMPENSATION CLICK LEVER(1) ASS'Y	1
12	1AA 23510	EXP. COMPENSATION CLICK LEVER SPRING	1
13	1AA AA390	EXP. COMPENSATION CLICK LEVER(2) ASS'Y	1
14	61913026	DRIVE MODE OPERATION PLATE S.S	1
15	60321810	WASHER	1
16	1AA 27100	DRIVE MODE SPRING PRESSURE	1
17	1AA 27020	DRIVE MODE DIAL SPRING	1
18	1AA AA990	DRIVE MODE OPERATION PLATE ASS'Y	1
19	61813026	DRIVE MODE LOCK PLATE S.S	1
20	1AA 26510	DRIVE MODE LOCK PLATE	1
21	1AA AA970	DRIVE MODE CONTACT PLATE ASS'Y	1
22	66001068	MULTI-EXP. RETURN GEAR S.S	1
23	1AA AA980	MULTI-EXP. RETURN GEAR ASS'Y	1
24	1AA 27920	MULTI-EXP. RETURN SPRING	1
25	1AA 28810	COUNTER LCD RETAINER	1
26	1AA 51100	COUNTER LCD PANEL	1
27	1AA 58800	COUNTER LCD CONNECTOR RUBBER	1
28	61813026	COUNTER LCD HOLDER S.S	2
29	1AA 28720	COUNTER LCD HOLDER	1
30	61911522	DRIVE FPC S.S	2
31	1AA 55310	DRIVE FPC	1
32	*	MYLER FILM	2
33	66001076	FPC CONNECTOR S.S	2
34	1AA 58200	FPC CONNECTOR PLATE (2)	1
35	1AA 58400	FPC CONNECTOR RUBBER (2)	1
36	1AA 56500	RELEASE P.C BOARD (1) ASS'Y	1
37	66101225	E RING	1
38	1AA 28420	MULTI-EXP. LOCK LEVER SPRING	1
39	1AA AA430	MULTI-EXP. LOCK LEVER ASS'Y	1
40	63924026	ISO DIAL BASE PLATE S.S	3
41	1AA AA960	ISO DIAL BASE PLATE SUBASSEMBLY	1
42	1AA 10202	BODY LOCATOR PIN	2
43	63926026	MIRROR BOX ASS'Y S.S	2
44	*	BODY	1
45	*	MOUNT BASE	1

PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

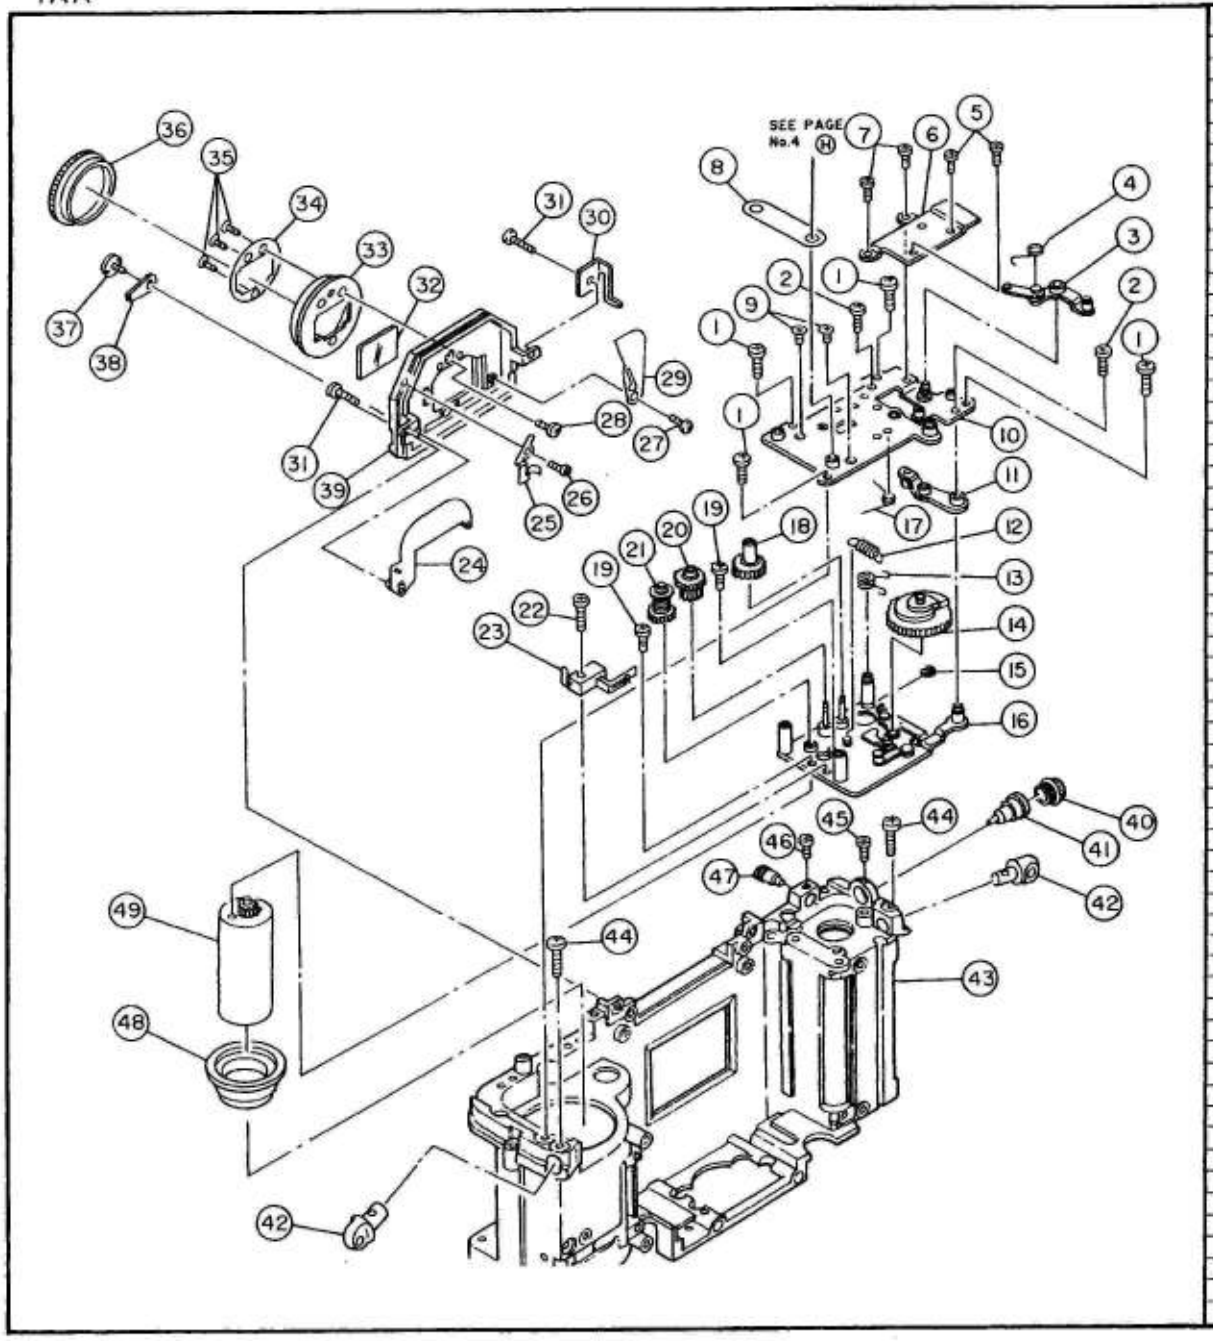

	PARTS NO.	DESCRIPTION	Q'TY
1	61923026	S. CHARGE BASE PLATE UNIT S.S	3
2	63903026	S. CHARGE UPPER BASE PLATE S.S	2
3	1AA AA160	QR LEVER UNIT ASS'Y	1
4	1AA 49820	RATCHET SPRING	1
5	63903026	QR BASE PLATE S.S	2
6	1AA 48010	QR BASE PLATE	1
7	61912026	QR BASE PLATE S.S	2
8	1AA 59800	L INSULATION SHEET	1
9	61813026	S. CHARGE UPPER BASE PLATE S.S	2
10	1AA AA610	S. CHARGE UPPER BASE PLATE ASS'Y	1
11	1AA AA630	S. CHARGE LEVER ASS'Y	1
12	1AA 47010	LIMIT LEVER SPRING	1
13	1AA 47100	APERTURE SET ARM SPRING	1
14	1AA AA650	S. CHARGE CAM ASS'Y	1
15	66101512	E RING	1
16	1AA AA640	S. CHARGE LOWER BASE PLATE ASS'Y	1
17	1AA 48310	MULTI-EXP. RELEASE LEVER SPRING	1
18	1AA 46200	S. CHARGE GEAR (4)	1
19	61912226	SHUTTER CHARGE MOTOR S.S	2
20	1AA 46120	S. CHARGE GEAR (3)	1
21	1AA AA620	FRICTION GEAR ASS'Y	1
22	63904022	TIMING SWITCH S.S	1
23	174 41320	TIMING SWITCH	1
24	1AA AC160	EYE-PIECE SHUTTER BLADE (A) ASS'Y	1
25	1AA 88200	EYE-PIECE SHUTTER CLICK PLATE	1
26	61901526	EYE-PIECE SHUTTER CLICK PLATE S.S	1
27	66001050	EYE-PIECE SHUTTER BLADE (B) S.S	1
28	61911826	EYE-PIECE RING BASE S.S	1
29	1AA 87910	EYE-PIECE SHUTTER BLADE (B)	1
30	1AA 56200	TIME CODE RETAINING PLATE	1
31	63914026	EYE-PIECE ASS'Y S.S	2
32	1AA 88900	EYE-PIECE PROTECTION GLASS	1
33	1AA 88530	EYE-PIECE RING BASE	1
34	1AA 88820	EYE-PIECE VIEWFINDER FRAME	1
35	61812828	EYE-PIECE VIEWFINDER FRAME S.S	3
36	1AA 88620	EYE-PIECE RING	1
37	1AA 88310	EYE-PIECE SHUTTER LEVER S.S	1
38	1AA 87720	EYE-PIECE SHUTTER LEVER	1
39	1AA 87520	EYE-PIECE COVER	1
40	139 13800	SYNCHRO CAP	1
41	1AA AA240	S. SOCKET ASS'Y	1
42	1AA 10510	STRAP HOLDER	2
43	*	BODY	1
44	61927026	STRAP HOLDER S.S	2
45	61903022	S. SOCKET S.S	1
46	61913522	R. SOCKET S.S	1
47	1AA AA230	R. SOCKET ASS'Y	1
48	1AA 14320	SPOOL HOLDER	1
49	1AA 51510	SHUTTER CHARGE MOTOR	1
24-29,32-39,			
	1AA AA060	EYE-PIECE A	1

PARTS MARKED * IS NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

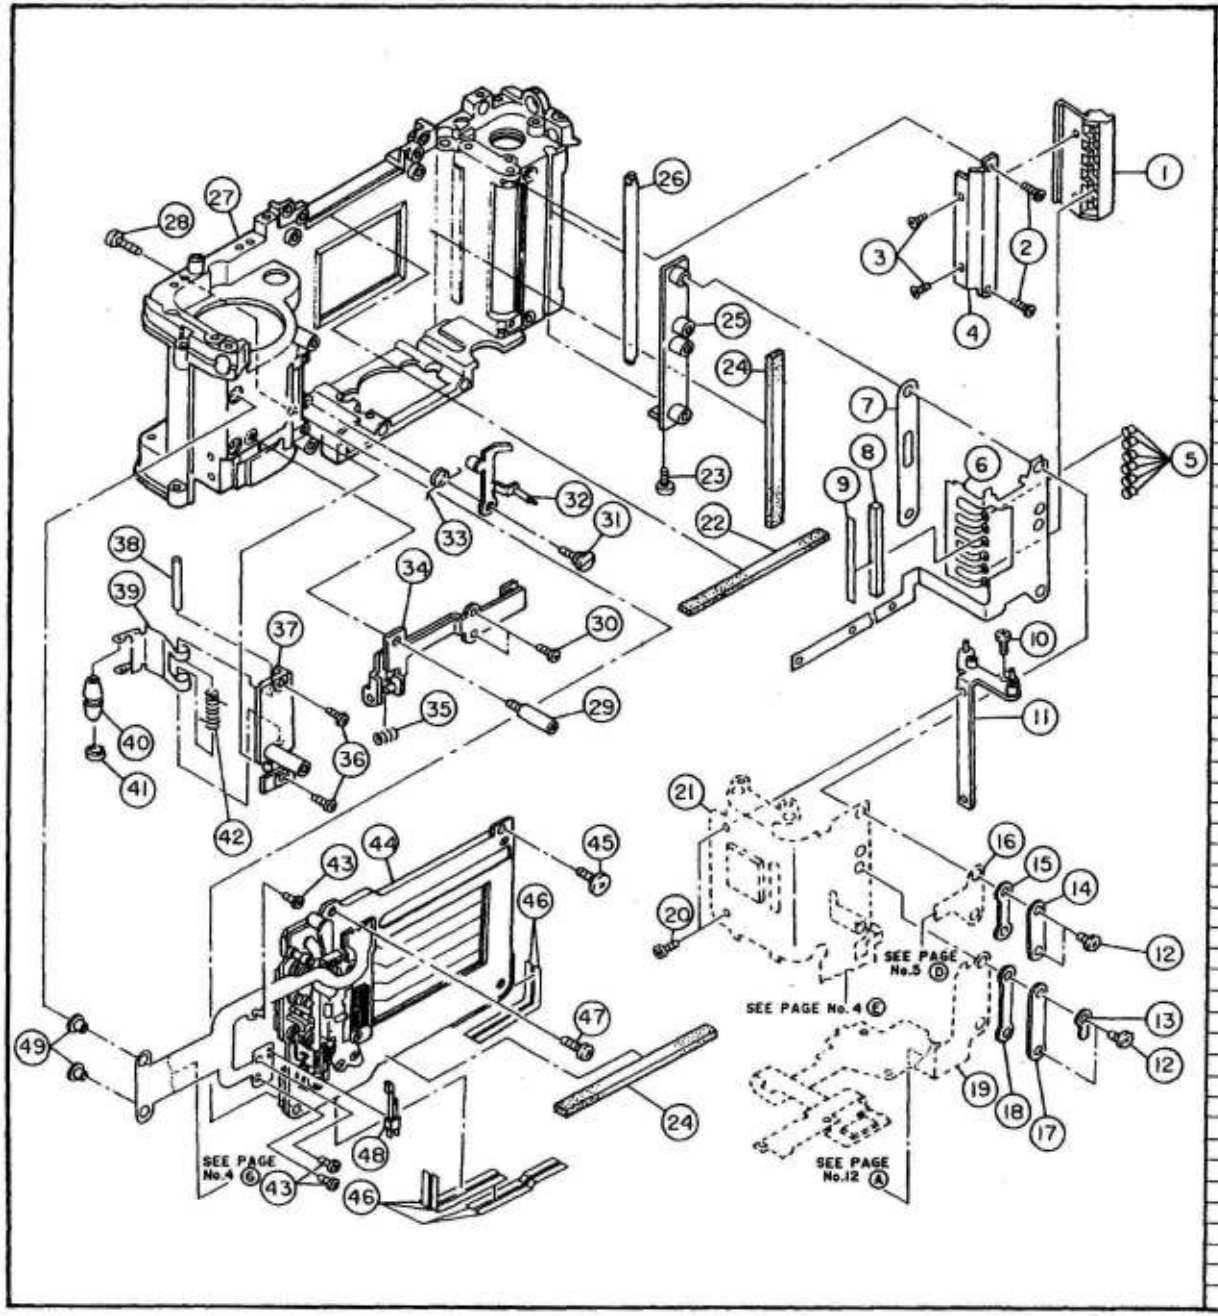

	PARTS NO.	DESCRIPTION	Q'TY
1	174 46010	DX CASE	1
2	61913526	DX FPC ASS'Y S.S	2
3	61812226	DX FIXER S.S	2
4	174 46400	DX FIXER	1
5	1AA 19910	DX PIN	6
6	1AA 55520	DX FPC	1
7	1AA 57710	SUB FPC INSULATION SHEET	1
8	174 46300	DX RUBBER	1
9	1AA 68900	DX HINGE SPACER	1
10	61813026	CONNECTOR BASE (S) ASS'Y S.S	1
11	1AA AA830	CONNECTOR BASE (S) ASS'Y	1
12	66001041	FPC CONNECTOR S.S	4
13	1AA 29800	LUG PLATE	1
14	1AA 58100	FPC CONNECTOR PLATE (1)	1
15	1AA 58300	FPC CONNECTOR RUBBER (1)	1
16	---	S-LCD PANEL FPC(See Page No.5)	
17	1AA 58200	FPC CONNECTOR PLATE (2)	1
18	1AA 58400	FPC CONNECTOR RUBBER (2)	1
19	---	FLASH METERING FPC(See Page No.12)	
20	61912026	SUB FPC ASS'Y S.S	2
21	---	SUB FPC ASS'Y(See Page No.4)	
22	1AA 69800	LIGHT-PROOF MOQUETTE	1
23	61923026	CONNECTOR BASE (L) S.S	1
24	174 17300	LOCK CLAW MOQUETTE	2
25	1AA AA250	CONNECTOR BASE (L) ASS'Y	1
26	1AA 43310	R COUPLING SHAFT	1
27	*	BODY	1
28	61925028	SHUTTER S.S	1
29	1AA 99000	MECH. BULB PLATE S.S	1
30	61912526	MECH. BULB PLATE S.S	2
31	1AA 98810	MECH. BULB LEVR S.S	1
32	1AA AA210	MECH. BULB LEVER ASS'Y	1
33	1AA 98900	MECH. BULB LEVER SPRING	1
34	*	MECH. BULB SLIDE PLATE	1
35	1AA 98210	MECH. BULB SPRING	1
36	61912526	FILM HOLD BASE S.S	1
37	1AA 99100	FILM HOLD BASE	1
38	1AA 99200	FILM HOLD SHAFT	1
39	1AA 99310	FILM HOLD PLATE	1
40	1AA 99420	FILM HOLD ROLLER	1
41	174 44301	ROLLER TUBE	1
42	1AA 99520	FILM HOLD SHAFT SPRING	1
43	61912026	SHUTTER FPC S.S	3
44	1AA 51600	SHUTTER	1
45	66001043	SHUTTER S.S	1
46	1AA 67701	MIRROR LIGHT-PROOF MOQUETTE	6
47	66001065	SHUTTER S.S	1
48	1AA 57200	MECH. BULB SWITCH	1
49	1AA 58610	CONNECTOR POST (2)	2
34,35,	1AA AA170	MECH. BULB SLIDE PLATE ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

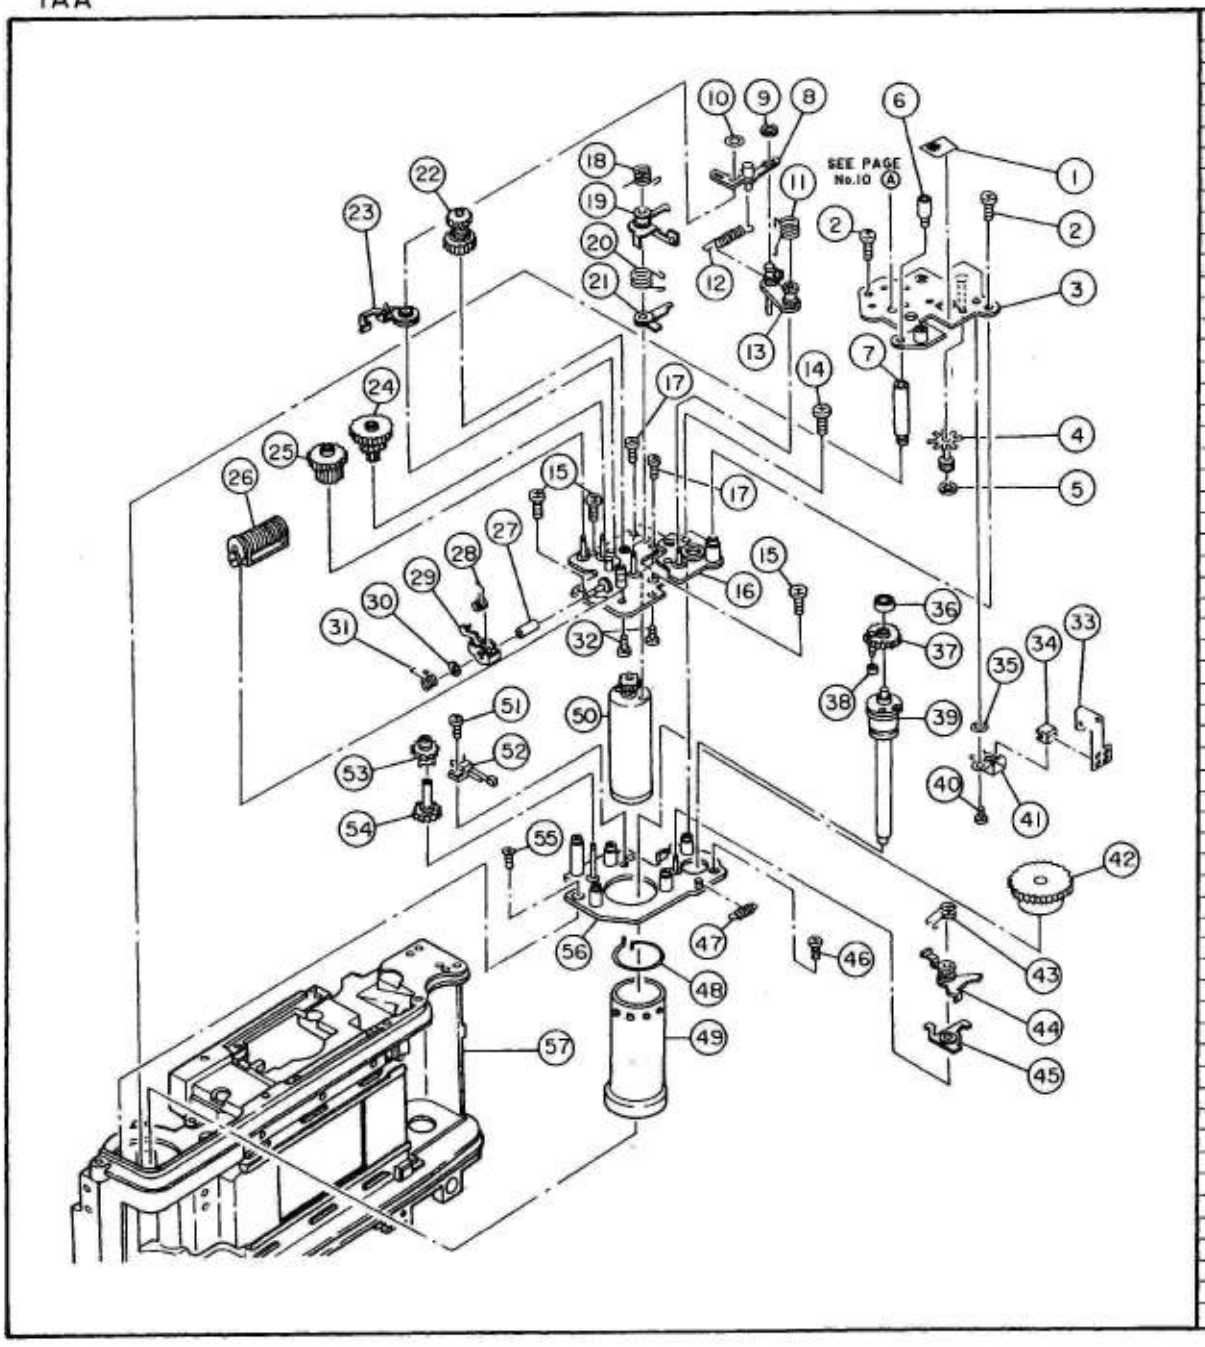

	PARTS NO.	DESCRIPTION	Q'TY
1	*	ACETATE CLOTH TAPE	1
2	66001068	WINDING LOWER BASE PLATE S.S	2
3	1AA AA840	WINDING LOWER BASE PLATE SUBASSEMBLY	1
4	1AA AA850	WINDING ENCODER ASS'Y	1
5	66101225	E RING	1
6	1AA 36620	WINDING UNIT S.S	1
7	1AA 14410	WINDING UNIT POST	1
8	1AA AA830	REWIND COUPLING PLATE (1) ASS'Y	1
9	66101225	E RING	1
10	60242612	WASHER	1
11	1AA 34130	REWIND LEVER SPRING	1
12	1AA 37840	REWIND COUPLING PLATE SPRING	1
13	1AA AA560	REWIND LEVER ASS'Y	1
14	66001039	WINDING MID BASE PLATE S.S	1
15	66001068	WINDING MID BASE PLATE S.S	3
16	1AA AA580	WINDING MID BASE PLATE ASS'Y	1
17	63902226	WINDING MOTOR S.S	2
18	1AA 33820	REWIND LEVER HOOK SPRING	1
19	1AA AA690	REWIND LEVER HOOK ASS'Y	1
20	1AA 33720	RELEASE LEVER HOOK SPRING	1
21	1AA AA680	RELEASE LEVER HOOK ASS'Y	1
22	1AA AA530	WINDING GEAR (3) ASS'Y	1
23	1AA AA500	REWIND COUPLING PLATE (2) ASS'Y	1
24	1AA AA510	WINDING GEAR (5) ASS'Y	1
25	1AA AA520	WINDING GEAR (7) ASS'Y	1
26	1AA 51800	SOLENOID PLUNGER	1
27	1AA 34400	CLUTCH LEVER HOLDER	1
28	1AA 34820	CLUTCH LEVER UP SPRING	1
29	1AA AA540	CLUTCH LEVER ASS'Y	1
30	66101225	E RING	1
31	1AA 34720	CLUTCH LEVER DOWN SPRING	1
32	61902226	SOLENOID PLUNGER S.S	2
33	1AA 55900	PERFORATION FPC *	1
34	5ENCGP1A67L**01	PHOTO-INTERRUPTER	1
35	60121810	WASHER	1
36	1AA 31600	SPROCKET BEARING	1
37	1AA AA790	SPROCKET GEAR ASS'Y	1
38	1AA 32600	RELEASE LEVER CHARGE ROLLER	1
39	1AA AC310	SPROCKET SHAFT ASS'Y	1
40	61911526	PHOTO-INTERUPTER S.S	1
41	1AA 37400	WINDING PHOTO-INTERUPTER RETAINER	1
42	1AA 36020	WINDING GEAR (10)	1
43	1AA 30950	REVOLVING LIMIT LEVER SPRING	1
44	1AA AA590	REVOLVING RELEASE LEVER ASS'Y	1
45	1AA AA670	REVOLVING LIMIT LEVER ASS'Y	1
46	61922526	WINDING UNIT S.S	1
47	1AA 31040	REVOLVING RELEASE LEVER SPRING	1
48	1AA 36310	SPOOL SPRING	1
49	1AA 36220	SPOOL	1
50	1AA 51410	WINDING MOTOR	1
51	61922526	REVOLVING LIMIT SWITCH S.S	1
52	1AA 57310	REVOLVING LIMIT SWITCH	1
53	1AA 31400	WINDING GEAR (8)	1
54	1AA AA550	WINDING GEAR (9) ASS'Y	1
55	61823026	WINDING UNIT S.S	1
56	1AA AA600	WINDING UPPER BASE PLATE ASS'Y	1
57	*	BODY	1

PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

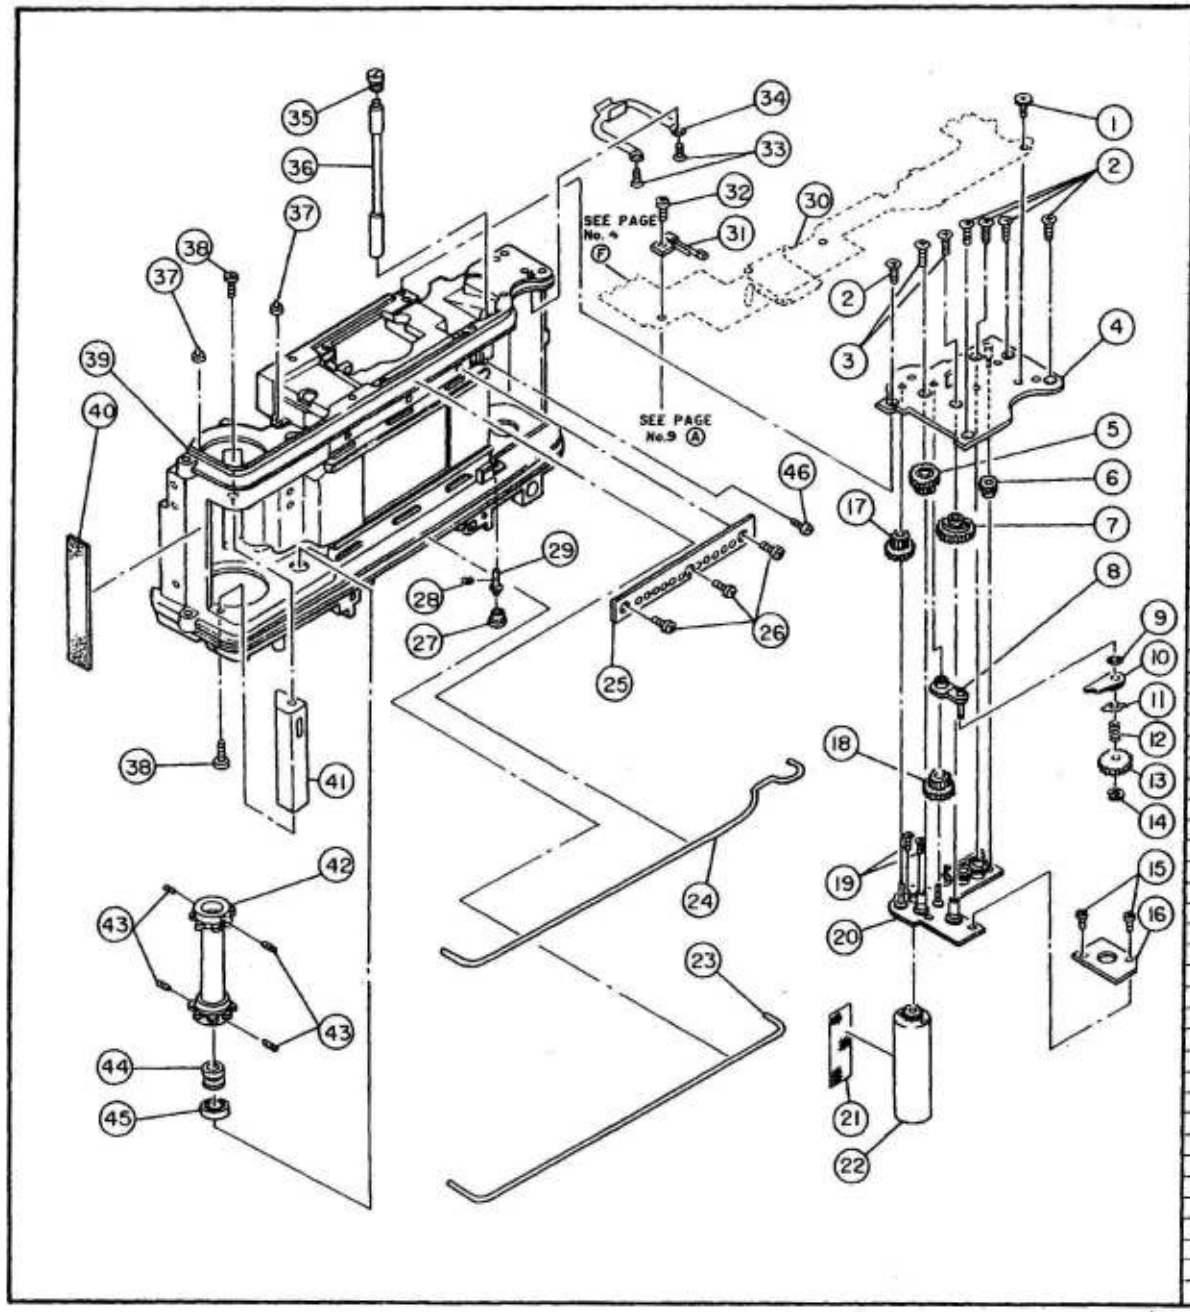

	PARTS NO.	DESCRIPTION	Q'TY
1	66001076	SUB FPC ASS'Y S.S	1
2	61813026	REWIND BASE PLATE S.S	4
3	61813026	REWIND BASE PLATE (L) S.S	3
4	1AA AA440	REWIND BASE PLATE (L) ASS'Y	1
5	1AA 40700	REWIND GEAR (2)	1
6	1AA 43200	REWIND GEAR (4)	1
7	1AA AA950	CAM GEAR ASS'Y	1
8	1AA AA930	EPICYCLIC GEAR ARM ASS'Y	1
9	1AA 41700	EPICYCLIC GEAR LEVER WASHER	1
10	1AA AA940	EPICYCLIC GEAR LEVER ASS'Y	1
11	1AA 41310	REWIND EPICYCLIC GEAR WASHER	1
12	1AA 41410	REWIND EPICYCLIC GEAR SPRING	1
13	1AA 41220	REWIND EPICYCLIC GEAR (2)	1
14	66101225	E RING	1
15	61901522	CAM P.C BOARD S.S	2
16	1AA 41800	CAM P.C BOARD	1
17	1AA 40610	REWIND GEAR (1)	1
18	1AA 40810	REWIND EPICYCLIC GEAR (1)	1
19	61802226	REWIND MOTOR S.S	2
20	1AA AA920	REWIND BASE PLATE (S) SUBASSEMBLY	1
21	*	ACETATE CLOTH TAPE	1
22	1AA 51300	REWIND MOTOR	1
23	1AA 13610	BODY LIGHT SHIELD (2)	1
24	1AA 13510	BODY LIGHT SHIELD (1)	1
25	1AA 10600	CONTACT PIN COVER	1
26	61912028	CONTACT PIN COVER S.S	3
27	1AA 10800	P. ROLLER METAL (S)	1
28	66100825	E RING	1
29	1AA 13700	FILM ROLLER (S)	1
30	---	SUB FPC ASS'Y(See Page No.4)	
31	1AA 57400	REWIND SWITCH	1
32	61922526	REWIND SWITCH S.S	1
33	61911529	CARTRIDGE LIFTER S.S	2
34	1AA 11900	CARTRIDGE LIFTER	1
35	1AA 10900	P. ROLLER METAL (L)	1
36	1AA 10720	FILM ROLLER	1
37	1AA 14700	WINDING LOCATOR PIN	2
38	69115076	SPOOL COVER S.S	2
39	*	BODY	1
40	1AA 39900	SPOOL COVER MOQUETTE	1
41	1AA 13410	SPOOL COVER	1
42	1AA 32820	SPROCKET	1
43	66001136	SPROCKET S.S	1
44	1AA 32910	SPROCKET SHAFT HOLDER	1
45	1AA 14610	SPROCKET UPPER BEARING	1
46	1AA 11100	FILM GUIDE PIN	1
8-14,			
	1AA AA450	EPICYCLIC GEAR ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

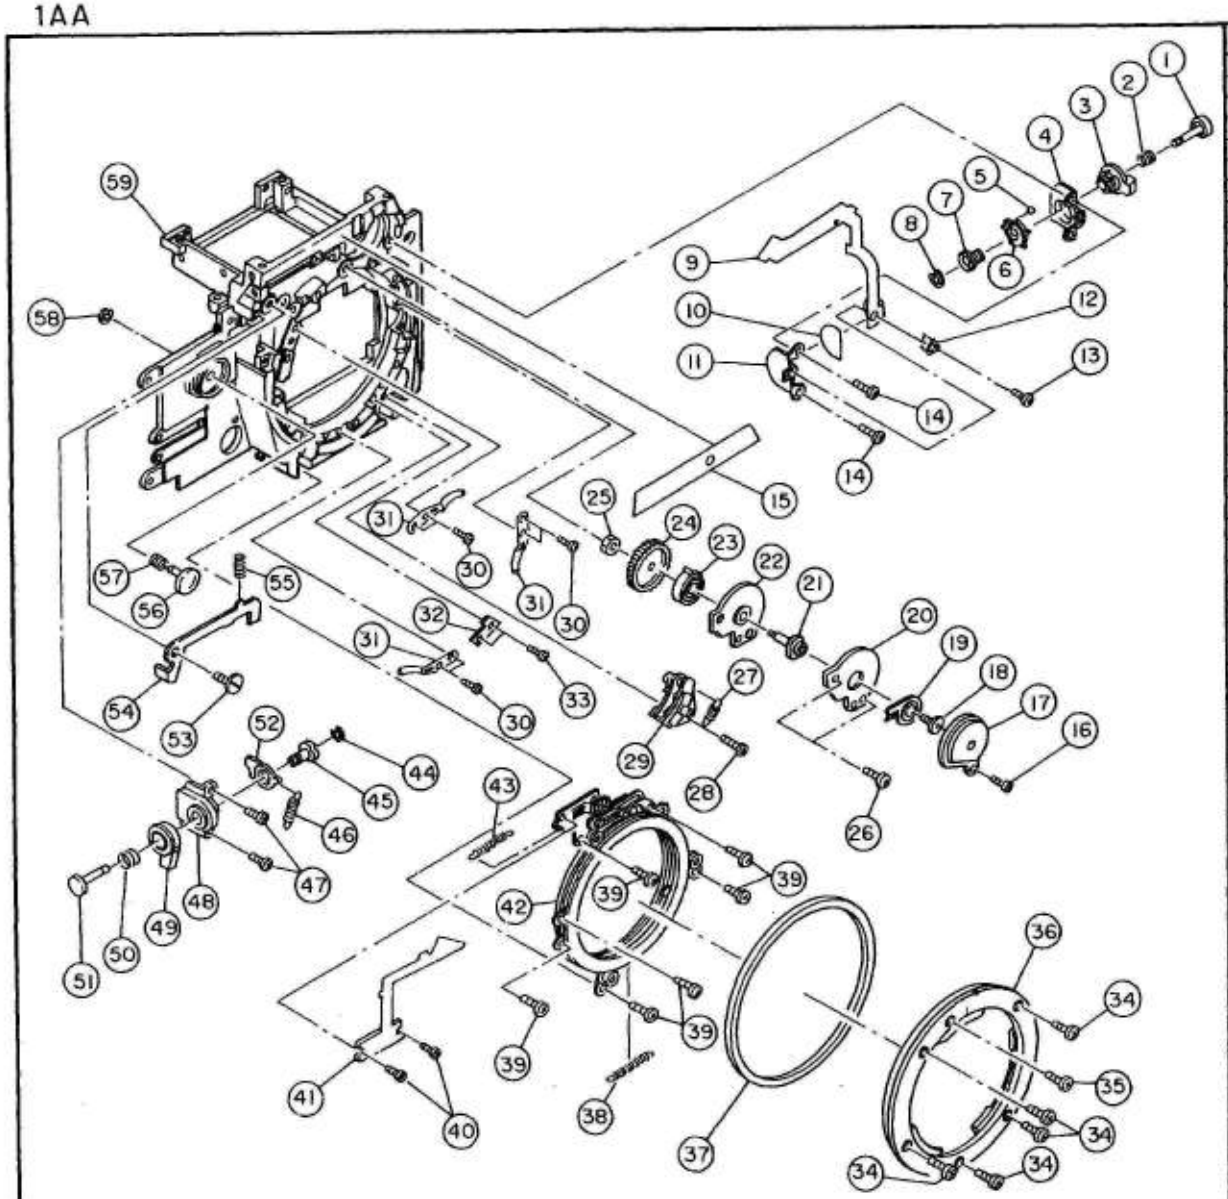

	PARTS NO.	DESCRIPTION	Q'TY
1	1AA 93910	LENS LOCK BUTTON	1
2	1AA 94010	LENS LOCK BUTTON SPRING	1
3	1AA 92320	METERING CHANGE KNOB	1
4	1AA AB590	METERING CHANGE BASE PLATE SUBASSEMLY	1
5	66701220	STEEL BALL (ø1.2)	1
6	1AA AB600	METERING CHANGE PLATE SUBASSEMLY	1
7	1AA 93600	MIRROR UP KNOB S.S	1
8	66101225	E RING	1
9	1AA 55400	METERING CHANGE FPC	1
10	1AA 92800	METERING FPC ADHESIVE TAPE	1
11	1AA 93000	METERING CHANGE FPC PLATE	1
12	1AA 92900	PREVIEW SWITCH	1
13	61911826	PREVIEW SWITCH S.S	1
14	61913026	METERING CHANGE FPC PLATE S.S	2
15	1AA 74900	FRONT COVER LIGHT-PROOF CURTAIN	1
16	61902022	APERTURE INTERLOCK COVER S.S	1
17	1AA 78700	APERTURE INTERLOCK COVER	1
18	66001050	APERTURE INTERLOCK BASE S.S	1
19	1AA AB570	APERTURE INTERLOCK BASE ASS'Y	1
20	1AA 56900	APERTURE P.C BOARD	1
21	1AA 77610	APERTURE INTERLOCK GEAR SHAFT (A)	1
22	1AA AB560	APERTURE INTERLOCK BASE PLATE ASS'Y	1
23	1AA 77710	SPIRAL SPRING	1
24	1AA 77510	APERTURE INTERLOCK GEAR (A)	1
25	66511722	HEXAGON NUT	1
26	61913026	APERTURE CODE ASS'Y S.S	2
27	174 76220	THETA SPRING	1
28	61912522	THETA BASE PLATE ASS'Y S.S	1
29	*	THETA BASE PLATE	1
30	61913026	MOUNT LEAF SPRING S.S	6
31	139 81230	MOUNT LEAF SPRING	3
32	139 81301	MOUNT STOPPER	1
33	61913026	MOUNT STOPPER S.S	2
34	131 17700	BODY MOUNT S.S	5
35	66001138	BODY MOUNT S.S	1
36	1AA 75000	BODY MOUNT	1
37	1AA 79000	MOUNT RING	1
38	1AA 75710	APERTURE RING SPRING	1
39	61912522	APERTURE RING PLATE ASS'Y S.S	6
40	63901526	OPEN F. STOP SIGNAL FPC S.S	2
41	1AA 55710	OPEN F. STOP SIGNAL FPC	1
42	*	APERTURE RING PLATE	1
43	1AA 77020	OPEN F. STOP SIGNAL LEVER SPRING	1
44	66101225	E RING	1
45	1AA 93600	MIRROR UP KNOB S.S	1
46	1AA 93510	MIRROR UP CLICK SPRING	1
47	61913026	MIRROR UP KNOB ASS'Y S.S	2
48	1AA AB580	MIRROR UP BASE PLATE (B) ASS'Y	1
49	1AA 93730	MIRROR UP KNOB	1
50	1AA 94010	LENS LOCK BUTTON SPRING	1
51	1AA 93910	LENS LOCK BUTTON	1
52	1AA 93810	MIRROR UP CAM	1
53	1AA 78600	LENS LOCK LEVER S.S	1
54	1AA 78410	LENS LOCK LEVER	1
55	1AA 78510	LENS LOCK LEVER SPRING	1
56	1AA 79210	EXPOSURE CHECK BUTTON	1
57	139 31300	RELEASE SPRING	1
58	66101525	E RING	1
59	*	MOUNT BASE	1

	PARTS NO.	DESCRIPTION
1-14,16-33,38-57,	1AA AB070	MOUNT BASE ASS'Y(See Page No.12)
1-57,	1AA AB000	MIRROR BOX ASS'Y(See Page No.12)

	PARTS NO.	DESCRIPTION
18-25,	1AA AB360	APERTURE CODE ASS'Y
27,29,	1AA AB350	THETA BASE PLATE ASS'Y
38,40-43,	1AA AB370	APERTURE RING PLATE ASS'Y

*PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

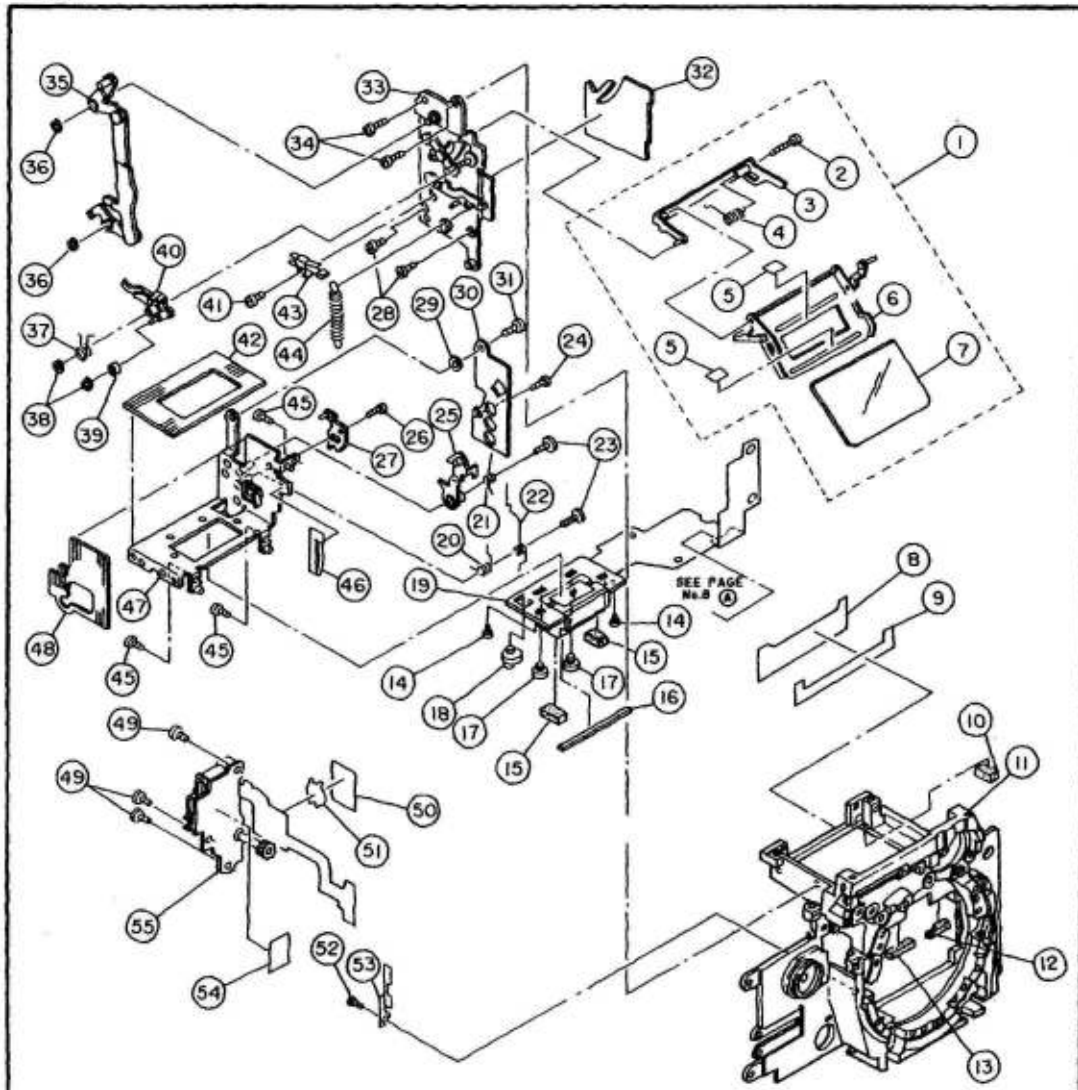

	PARTS NO.	DESCRIPTION	Q'TY
1	1AA A8260	MAIN MIRROR ASS'Y	1
2	1AA 61910	MAIN MIRROR HINGE SHAFT (R)	1
3	1AA A8500	SWING ARM ASS'Y	1
4	1AA 61810	MAIN MIRROR SPRING	1
5	1AA 60310	MAIN MIRROR ADHESIVE TAPE (A)	2
6	*	MAIN MIRROR FRAME	1
7	1AA 60100	MAIN MIRROR	1
8	1AA 74600	LIGHT-PROOF CURTAIN	1
9	1AA 74700	LIGHT-PROOF CURTAIN ADHESIVE TAPE	1
10	1AA 74400	SWING ARM CUSHION	1
11	*	MOUNT BASE	1
12	1AA 75310	MIRROR CUSHION (R)	1
13	1AA 75210	MIRROR CUSHION (L)	1
14	63911526	SPOT METERING ASS'Y S.S	2
15	1AA 67810	M. MOQUETTE	2
16	1AA 67700	MIRROR LIGHT-PROOF MOQUETTE	1
17	1AA 67301	SPOT METERING ADJUSTMENT SCREW	2
18	1AA 67400	SPOT METERING ADJUSTMENT PIN	1
19	1AA A8050	SPOT METERING ASS'Y	1
20	1AA 63600	45° SPRING (A)	1
21	1AA 65410	45° SPRING (B)	1
22	1AA 61030	SUB MIRROR SPRING	1
23	1AA 63720	SPRING S.S	2
24	61912026	FPC PROTECTIVE PLATE S.S	1
25	1AA A8250	45° ADJUSTMENT BASE PLATE (B) ASS'Y	1
26	61911826	ARM HINGE ADJUSTMENT BASE PLATE S.S	1
27	1AA A8390	ARM HINGE ADJUSTMENT BASE PLATE ASS'Y	1
28	61912026	MIRROR UP BASE PLATE S.S	2
29	60122112	WASHER	1
30	1AA 65900	FPC PROTECTIVE PLATE	1
31	61923026	FPC PROTECTIVE PLATE S.S	1
32	1AA 74500	ANTI-REFLECTION PLATE (L)	1
33	*	MIRROR UP BASE PLATE	1
34	61923026	MIRROR BOX BASE PLATE S.S	2
35	1AA A8270	MIRROR UP ARM ASS'Y	1
36	66101225	E RING	2
37	1AA 72400	MIRROR UP SPRING	1
38	66101225	E RING	2
39	1AA 72500	MIRROR UP ROLLER (B)	1
40	1AA A8280	MIRROR UP LEVER ASS'Y	1
41	61922526	MIRROR UP SWITCH S.S	1
42	1AA 67500	ANTI-REFLECTION PLATE (B)	1
43	1AA 57110	MIRROR UP SWITCH	1
44	1AA 73030	APERTURE LEVER SPRING	1
45	61923026	MIRROR BOX BASE PLATE S.S	3
46	1AA 62720	MIRROR BOX DRESS PLATE (R)	1
47	*	MIRROR BOX BASE PLATE	1
48	1AA 67620	ANTI-REFLECTION PLATE (R)	1
49	61912526	APERTURE CONTROL BASE PLATE S.S	3
50	1AA 91410	EXPOSURE CHECK SWITCH TAPE	1
51	1AA 91211	EXPOSURE CHECK SWITCH	1
52	61912026	APERTURE LEVER RETAINING PLATE S.S	1
53	1AA 79600	APERTURE LEVER RETAINING PLATE	1
54	*	DOUBLE STICK TAPE	1
55	*	APERTURE CONTROL BASE PLATE	1
50,51,54,55,	1AA A8010	APERTURE CONTROL BASE PLATE ASS'Y	1

	PARTS NO.	DESCRIPTION
11,52,53,	1AA A8070	MOUNT BASE ASS'Y(See Page No.11)
1,11-14,17-19,20-45,47,48,	1AA A8000	MIRROR BOX ASS'Y(See Page No.111)

PARTS MARKED * ARE NOT AVAILABLE

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.

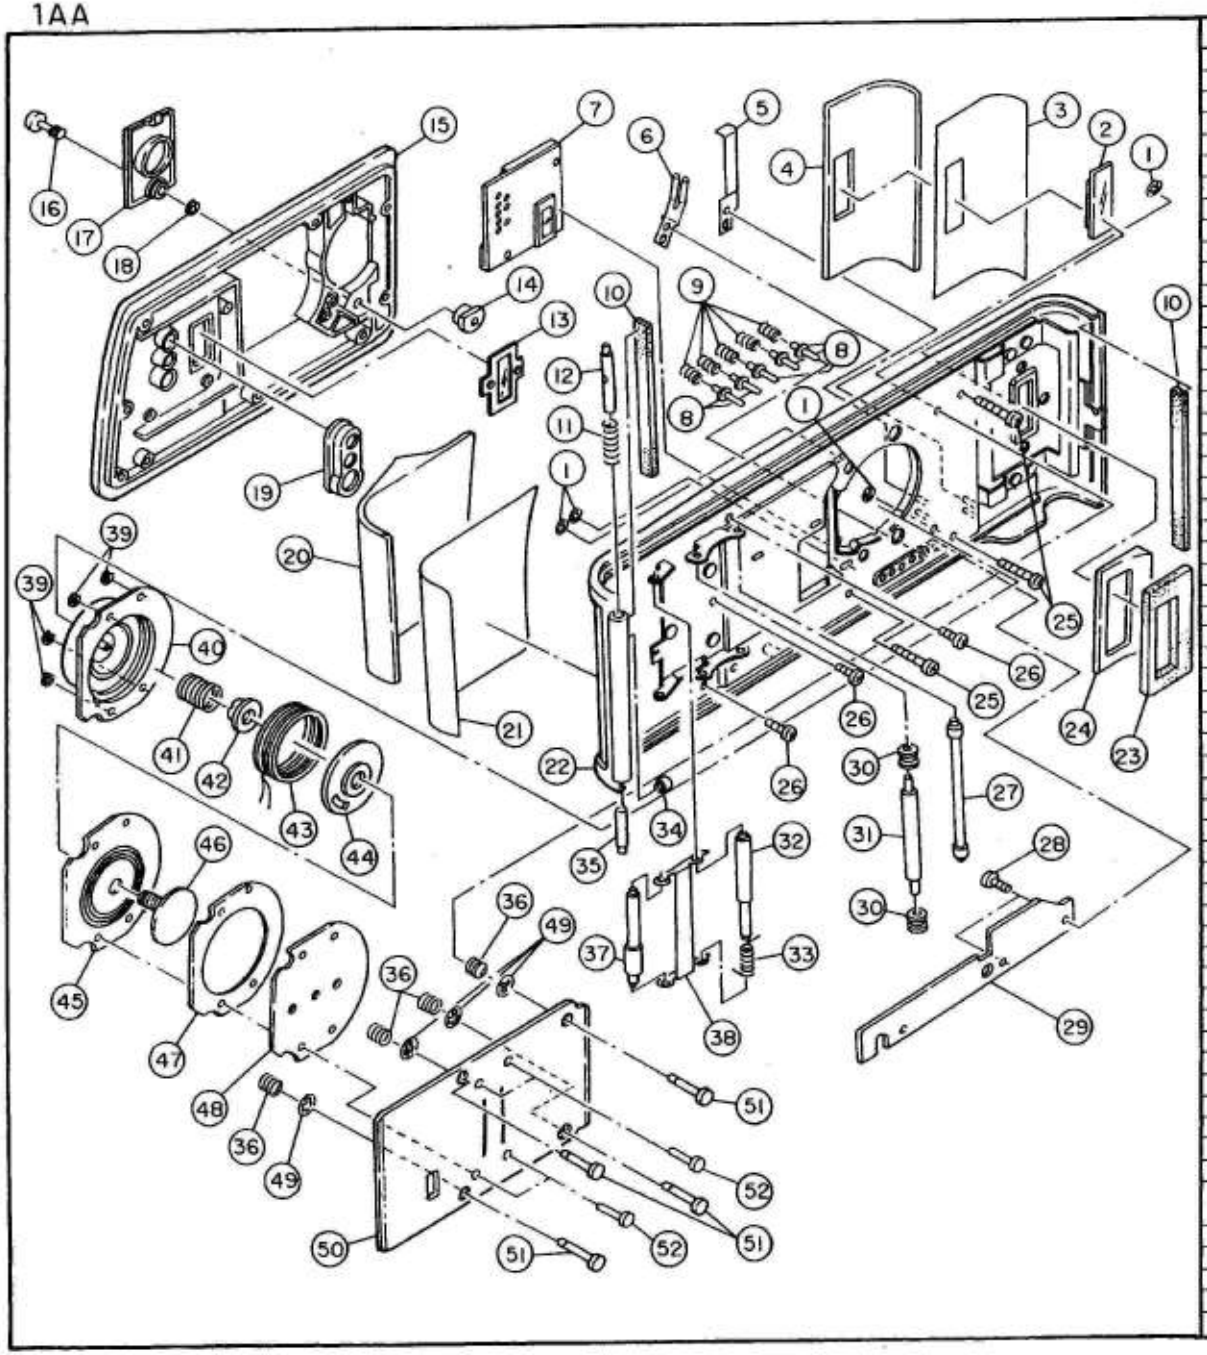

	PARTS NO.	DESCRIPTION	Q'TY
1	66101225	E RING	4
2	174 16610	FILM CHECK WINDOW	1
3	1AA 68500	BACK COVER (L) TAPE	1
4	1AA 18210	BACK COVER RUBBER (L)	1
5	384 15840	D. BATTERY CONTACT (+)	1
6	384 15930	D. BATTERY CONTACT (-)	1
7	1AA 55000	DATE MODULE	1
8	1AA 14920	BACK COVER CONTACT PIN	5
9	1AA 15000	BACK COVER CONTACT SPRING	5
10	174 17300	LOCK CLAW MOQUETTE	2
11	174 17700	HINGE SHAFT SPRING	1
12	131 13100	HINGE SHAFT (2)	1
13	384 15200	DATE WINDOW	1
14	1AA 89200	BATTERY CAP SCREW SOCKET	1
15	1AA 16010	BACK COVERING	1
16	1AA 89100	BATTERY CAP SCREW	1
17	1AA 89010	BATTERY CAP	1
18	66102024	E RING	1
19	384 15410	MODE BUTTON	1
20	1AA 18110	BACK COVER RUBBER (R)	1
21	1AA 68400	BACK COVER (R) TAPE	1
22	1AA AC250	BACK COVER SUBASSEMBLY	1
23	1AA 68800	FILM CARTRIDGE MOQUETTE	1
24	1AA 68710	MOQUETTE BASE	1
25	69116076	BACK COVERING S.S	3
26	69113586	BACK COVERING S.S	3
27	1AA 16300	BACK COVER ROLLER (1)	1
28	69113576	VACUUM P.C BOARD S.S	2
29	1AA AE600	VACUUM P.C BOARD ASS'Y	1
30	1AA 16500	BACK COVER ROLLER (2) COLLAR	2
31	1AA 16400	BACK COVER ROLLER (2)	1
32	1AA 16610	BACK COVER FILM HOLD SHAFT	1
33	1AA 16920	BACK COVER FILM HOLD SHAFT SPRING	1
34	1AA 69600	HINGE SHAFT STOPPER	1
35	131 13000	HINGE SHAFT (1)	1
36	1AA 15410	PRESSURE PLATE SPRING	4
37	1AA 16810	BACK COVER FILM HOLD ROLLER	1
38	1AA 16720	BACK COVER FILM HOLD PLATE	1
39	---	E RING	4
40	---	VACUUM CASE	1
41	---	VACUUM DRIVE PLATE SPRING	1
42	---	VACUUM DRIVE PLATE (2)	1
43	---	VACUUM COIL	1
44	---	VACUUM COIL HOLDER	1
45	---	VACUUM RUBBER	1
46	---	VACUUM DRIVE PLATE (1)	1
47	---	VACUUM BASE	1
48	---	VACUUM BASE (P)	1
49	---	CS CIR-CLIP	4
50	---	PRESSURE PLATE	1
51	---	PRESSURE PLATE SHAFT	4
52	---	VACUUM CASE PIN	4

NOTE:
Assemble the parts in order of 39-52.

39-52,			
	1AA AA360	VACUUM UNIT ASS'Y	1
1-52,			
	1AA AA100	BACK COVER ASS'Y	1

This scan of this manual and any included edits is copyright © 2011 Peter Robinson. All rights reserved.
Reproduction for personal use is allowed. Reproduction for commercial use is strictly prohibited.